

Motorized Recreational Vehicle

Extended Protection







Travel with peace of mind.

Nationwide Protection

FCPP covers breakdowns occurring anywhere in Canada and the continental United States.

Transferable Coverage

In the event you choose to sell your recreational vehicle, you can apply to transfer the coverage to the next owner for the remainder of the contract/policy term.

Reducing Deductible

Your deductible will be reduced by \$50 when repairs are performed at the original selling dealer.

Extended Eligibility

Motorized recreation vehicles that are still under manufacturer's warranty are still eligible for New RV coverage.



Travel with peace of mind.

Travel with a First Canadian Protection Plan.

Today's recreational vehicles are equipped with all the comforts of home. The multitude of amenities and features suit every lifestyle and cater to all your travel needs.


But are you worried about unexpected breakdowns and unforeseen costly repairs? With the cost of service and components increasing each year, an expensive repair could ruin your travel plans. **Leave your worries behind with FCPP.**

- FCPP will quickly and efficiently handle your claim to ensure your vacation is not delayed or cut short.
 Repair costs are paid directly to the repair facility on authorized services, saving you from out-of-pocket expenses and the inconvenience of waiting for reimbursement.
- Choose a protection plan to guard you against these unplanned expenses.

It's better to have protection and NOT NEED it, than to NEED it and NOT HAVE ANY.



Select the right plan for You.

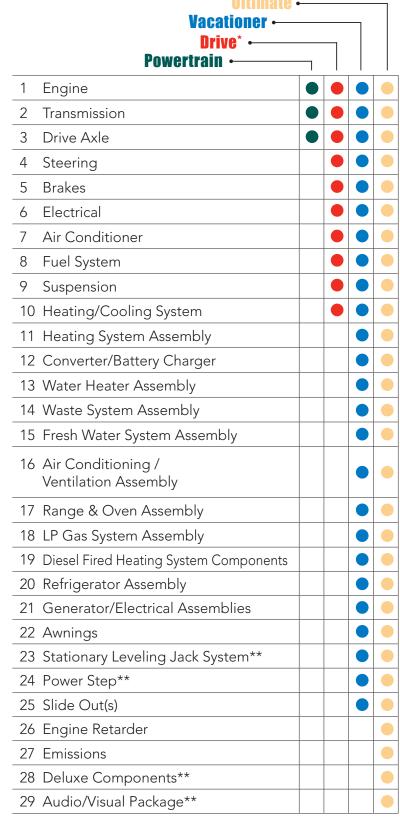

*Drive Coverage - available on new units only

**Factory installed or approved



Schedule of Coverage - Motorized Recreational Vehicle Protection



ENGINE

Cylinder Block and all internally lubricated parts contained within the engine including:

Cylinder Head(s) Pistons; Piston Rings				
Connecting Rods & Bearings; Crankshaft				
Crankshaft Main Bearings; Camshaft				
Camshaft Bearings; Cam Followers				
Timing Chain; Timing Gears; Timing Chain Cover				
Timing Chain Tensioners				
Engine Serpentine Belt Tensioner				
Idler Pulley; Idler Pulley Bearings				
Flywheel (excluding teeth)				
Rocker Arms; Rocker Shafts; Rocker Bearings		•		
Cylinder Head Valves; Valve Seals; Valve Seats				
Valve Lifters; Valve Springs; Valve Retainers				
Push Rods; Water Pump; Oil Pump				
Oil Pump Housing; Harmonic Balancer				
Oil Pan (excluding drain plug threads)				
Intake & Exhaust Manifold; Valve Covers				
Engine Mounts				
Diesel Fuel Injectors (except for wear and tear and/or contamination)	•	•	•	
Diesel Fuel Injection Pump; Diesel Vacuum Pump				
Turbocharger or Supercharger (original factory installed parts or components only)	•	•	•	
Turbocharger or Supercharger Housing and the Internal Parts (when damage due to the failure of an internally lubricated part)		•	•	
Seals & Gaskets**				

TRANSMISSION

(Automatic) Transmission Case (only if damaged from within) and all Internal Parts contained within the Transmission Case:

Input Shaft; Torque Converter; Vacuum Modulator				
Transmission Mounts; Oil Pan; Cooler; Seals & Gaskets**	•	•	•	

DRIVE AXLE

Ultimate •	\neg
V acationer •——	
Drive* •	
Powertrain •	

Final Drive Housing; Drive Axle Case (only if damaged from within) and all internally lubricated parts contained within the Drive Axle Case	•	•	
Differential Cover; Axle Shaft			
Drive Shaft Universal Joint; Drive Shaft; Shaft; Hub Bearings	•	•	
Tapered Wheel Bearings; Seals & Gaskets**			

STEERING

Steering Box and all internal parts contained within		
Rack & Pinion Gear; Power Steering Pump		
Power Steering Hoses; Steering Spindle		
Pitman Arm; Idler Arm; Centre Link		
Upper Steering Column Shaft		
Relays; Sensors; Seals & Gaskets**		

BRAKES

Master Cylinder; Vacuum Assist Booster; Hydro Assist Booster	•	•	
Disc Brake Caliper; Wheel Cylinders			
Compensating Valve			
Metal Brake Hydraulic Lines			
Hydraulic Control Unit			
Combination Valve Air Brakes; Compressor			
Diaphragm; Treadle; Disc Caliper; Compensating Valve	•	•	
Slack Adjusters; ABS System; Brake Pedal; Seals and Gaskets**			

ELECTRICAL

Alternator; Digital Instrument Cluster		
Instrument Panel Printed Circuit Board		
Voltage Regulator; Starter Motor		
Starter Solenoid; Starter Drive		
(Factory) Engine Compartment Wiring Harness		
Electronic Ignition Module		

Vacationer ← Drive* ← CTRICAI (CONT) Powertrain ←

Ultimate ←

LLEGINIUAL (GUNI.)	'	'	'	'
Distributor Pick-up Coil				
Ignition Switch; Ignition Lock Cylinder				
Ignition Coils				
Front & Rear Wiper Motor; Washer Pump & Switch				
Manually Operated Electrical Switches				
Electronic Ignition Module				
Body Computer / Control Module				
Powertrain Control Module; Stop Lamp Switch				
Headlamp Switch; Turn Signal Switch				
Heater/AC Control Assembly; Blower Motor Resistor				
Horns; Factory Installed Cruise Control Module				
Cruise Control Transducer				
Cruise Control Servo & Amplifier				
Cruise Control Engagement Switch				
Power Vent Motors; Door Glass Power Window Motor			•	
Power Window Switch				
Power Seat Motor; Power Seat Switch				
Power Mirror Motor; Power Mirror Motor Switch				
Power Antenna Motor (excluding Mast)				
Power Door Lock Actuator & Switch (includes baggage door)				
Battery Paralleling Switch; Back-up Alarm; Safety Restraints				

AIR CONDITIONING

Condenser; Compressor; Clutch Assembly & Pulley			
Air Conditioning Lines & Hoses; Evaporator			
High/Low Compressor Cut-off Switch; Circuit Breakers; Expansion Valve	•	•	•
Pressure Cycling Switch; Orifice Tube; Ducts and /Outlet Hoses; Temperature Programmer	•	•	•
Seals & Gaskets**			

Schedule of Coverage - Motorized Recreational Vehicle Protection

Ultimate • • • •

Vacationer • • • •

Drive* •——

Powertrain ---



	•	•	•
Fuel Pump; Fuel Tank			
Mechanical Fuel Tank Sending Unit			
Fuel Rail; Fuel Pressure Regulator			
Metal Fuel Delivery Lines; Fuel Tank Selector Valve; Fuel Injection Pump; Fuel Injection Sensor			
Diesel Fuel Injectors/Nozzles; Diesel and Gasoline Fuel Injectors		•	

SUSPENSION

Upper & Lower Control Arms		
Control Arm Shafts or Bushings		
Upper & Lower Ball Joints		
Torsion Bars & Mounts or Bushings		
Stabilizer Bar (excluding any electronic disconnect system); Stabilizer Links & Bushings		
King Pins; Steering Spindle; Spindle Support; Air Suspension		

HEATING / COOLING SYSTEM

Heater Core; Front & Rear Blower Motor		
Engine Cooling Fan & Motor; Hydraulic Fan Clutch Hub		
Radiator; Hot Water Valve		

HEATING SYSTEM ASSEMBLY

Furnace: Heat Exchanger; Squirrel Cage		
Time Delay Relay; Igniter; Burner Assembly		
Thermocouple; Gas Valve; Thermostat		
Blower Motor; Switches; PC Board		
Seals & Gaskets**		

CONVERTER / BATTERY CHARGER

Cooling Fan Motor; Electric Relays		
Circuit Boards		

WATER HEATER ASSEMBLY

Burner Assembly; Tank; Thermostat; Thermocouple			
Thermal Fuse; Gas Valve; Electronic Ignition Assembly		•	
PC Board; Switches; Heating Elements; Bypass Valves		•	
Pressure Reflief Valve; Wiring Harness			
Seals & Gaskets**			

WASTE SYSTEM ASSEMBLY

Toilet; Vacuum Breaker; Float Assembly		
Ball Valve; Slide Valve; Water Inlet Valve; Sink(s)		
Holding Tanks; Gate Valves & Connections		
Seals & Gaskets**		

FRESH WATER SYSTEM ASSEMBLY

Water Pump; Compressor; Water Tank; Water Lines			
Traps; Fitting & Faucets; Seals & Gaskets**			

AIR CONDITIONING / VENTILATION ASSEMBLY

Compressor; Condenser; Evaporator; Accumulator; Heat Pump		•	
Expansion Valve; Thermostat; Receiver/Dryer			
Blower Motor; High-Low Cut Off Switches			
Pressure Cycling Switches; Relays; Heat Strip			
Fans; PC Board; Seals & Gaskets**			

RANGE & OVEN ASSEMBLY

Burner Assembly; Thermostat; Thermocouple		
Burner Valves; Ignition Assembly; Power Hood		
PC Board; Microwave Oven; Serviceable Seals & Gaskets**		

LP GAS SYSTEM ASSEMBLY

Drive* •——— Powertrain •———		
es; Gas Bottle Valve		

Vacationer —

Regulators; Gas Bottles; Gas Bottle Valve		
Mounting Brackets; Pigtails		
LP Gauges; LP Gas Lines & Fittings		

DIESEL FIRED HEATING SYSTEM COMPONENTS

(Maximum aggregate claim amount of \$5,000 over the Plan Term, including taxes)

Heating Elements: Circulating Pumps; Relays		
Burner Assembly; Circuit Boards; Seals & Gaskets**		

REFRIGERATOR ASSEMBLY

Thermostat; Thermocouple; Cooling Unit		
Burner Assembly; Igniter; Fans; PC Board		
Serviceable Refrigerator Door Seal; Wiring Harness		
Refrigerant; Elements & Switches; Seals & Gaskets**		
Up to \$150 for food and beverage spoilage in the event of a covered refrigerator or freezer breakdown		

GENERATOR / ELECTRICAL ASSEMBLIES

(Factory installed assembly with separate fuel system; maximum aggregate claim amount of \$4,000 over the Plan Term, including taxes). Internally lubricated moving parts including:

Pistons; Piston Rings & Pins		
Crankshaft & Main Bearings		
Connecting Rods & Rod Bearings; Valve Springs		
Guides & Seats; Oil Pump; Camshaft		
Timing Chain Gears and/or Belt Tensioners		
Rocker Arms; Engine Block		

Schedule of Coverage - Motorized Recreational Vehicle Protection



Cylinder Head & Cylinder Barrels only if damaged due to the failure of a covered part and component		
Starter; Electrical Generator; Switches; Hour Meter		
Gauges; Voltage Regulator; PC Board		
Factory Installed 12/110/220V Electrical System		
Wiring; Outlets & Power Converter/Inverter		
Monitor Panel; Solar Panels; & Transfer Switch		

AWNINGS

The Left & Right Manual Spring Assembly; Roller Drive on Slide Topper; Manual Dead Bolt Locks;		
Power Awnings Motors		

STATIONARY LEVELING JACK SYSTEM

(Factory installed or approved)

Motors; Pump/Jack Assembly; Lines		
Cylinders; Electric Switch; Wiring Harness		
Air Bags; Fittings; Braided Hydraulic Lines		

POWER STEP (Factory installed or approved)

Motor; Gear Box; Control Module; Cables (only		
if broken); wiring; actuator switches		

SLIDE OUT(S)

Motors; Pump Assembly; Braided Lines		
Fittings; Cylinders; Worm Gear		
Electric Switch; Wiring Harness		
Raised Roof Extension System		
Slide Cables (only if broken); Pulleys; Hydraulic Side Arm		



ENGINE RETARDER

Main Throttle Control Switch; Solenoid		
Linkage Butterfly Plate		

EMISSIONS

LIMITOTORO		
Cam Shaft Sensor; Canister Purge Solenoid		
Knock Sensor; Crank Angle Sensor; EGR Solenoid		
EGR Valve; Idle Speed Control Motor		
Mass Air Flow Sensor; Manifold Pressure Sensor		
O2 (Oxygen) Sensor; PCM Coolant Temp Sensor		
Serviceable Throttle Position Sensor (TPS)		
Canister Vent Solenoid		
Emissions parts and components are covered for the Plan Term to maximum of five years or 140,000 kilometres (whichever occurs first), from the In-Service Date and zero kilometres. Emission parts and components listed are covered only when they relate to emissions performance Breakdown.		

DELUXE COMPONENTS (Factory installed or approved)

Rear Monitor System or Backup Monitor System		
Freezer includes only the Thermostat, Thermocouple, Burner Assembly, Igniter, Cooling Unit, Fittings; Connections & PC Board		
Microwave Convection; E-plex Wiring & Modules; Induction Cook Tops; Dishwasher includes only the Drive Motor, Pulley, Heating Element, & Water Pump		
Washer/Dryer includes only the Drive Motor, Transmission, Pulley, Heating Element, Igniter, Main Controls, Blower, & Water Pump		
Trash Compactor includes only the Compactor Motor, Compacting Ram(s), & Relays		
Central Vacuum Cleaner System includes only the Electric Motor, Armature, & Relays		



DELUXE COMPONENTS (CONT.)

DELONE COMIT CHEMIC (COMI.)	
Fireplace includes only the Blower Motor, Flicker Motor, Controls and Switches, Heating Elements, PC Boards, Modules, & Circuit Breakers	
Manual Electronic Control Pad (sleep number beds only)	
External BBQ includes only the Burner, Igniter, & Control Valves	
Tilt/Telescopic Steering Assembly; Spot Light System	
Carbon Monoxide/Smoke Detector Alarm Sensors	
Garbage Disposal; Electronic/Remote Entrance	
Thermometer; Compass; Central Locking System	
Supplemental Restraint System (SRS); Self-Adjuster Springs	
Hood & Hood Hinges; Hood Latches & Springs	
Power Seat System; Seat Tracks	
Interior/Exterior Light Fixtures (excluding Bulbs)	
Electrical Outlets; Glove Box Door Hinges & Lock	
Shift Lever; Television Lift Motors; Thermostat; Propane Leak Detector; Ice Maker	
Power Seat System; Seat Tracks; Hood & Door Hinges; Hood Latches & Springs; OEM Remote Control System for Slide Out/Appliances; Serviceable Blind Motor	

AUDIO/VISUAL PACKAGE (Factory installed or approved)

Television (maximum television replacement value of \$1,000 per repair)		
Speakers; CD/DVD Player; Radio; Antenna Motors		
Rear Stereo System; GPS and Navigation System (maximum aggregate claim amount limited to \$3,000)		

^{*}Drive Coverage - available on new units only

^{**}Seals and Gaskets for the parts and components listed in the part and component group




Experienced Based Refund (EBR) / Guaranteed Price Rebate (GPR)

(Available on qualifying plans)

If the plan you select includes EBR/GPR, you can apply for a refund as soon as the contract/policy expires by time. Refunds are based on the amount you originally paid for the contract/policy, up to a maximum of \$2,000, less the deductible.

- Original contract/policy holder must still be registered owner.
- No mechanical or other benefit claims made during the entire term.
- Refund must be requested and claim received within the allotted time frame.

Some restrictions apply - see contract/policy for details.

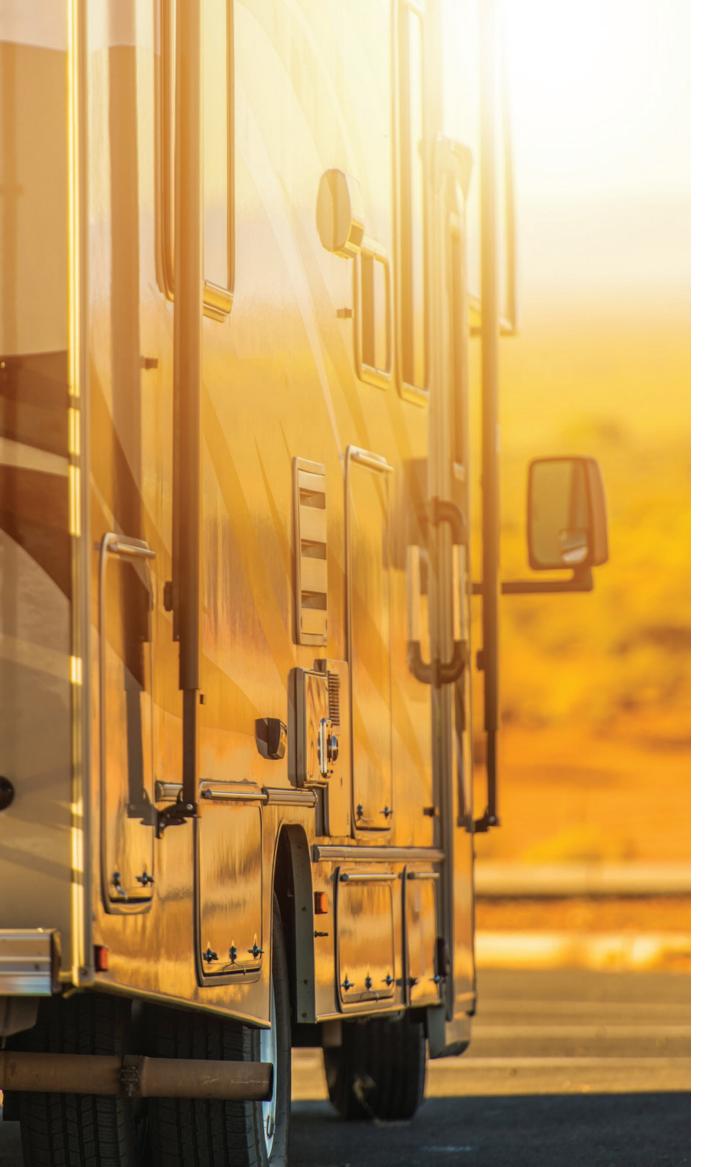

Additional Benefits Included in All Levels of Coverage

No Deductible will apply to the following benefits:



1-877-975-5338 (included for first 12 months of term available for full term)



RENTAL

In the event of a covered breakdown, we will pay or reimburse you for receipted expenses up to \$250 per claim to rent a replacement vehicle or reimburse you for actual taxi or public transportation expenses.*



TRIP INTERRUPTION

In the event that a breakdown occurs more than 160 km from residence and results in a repair facility keeping your unit overnight, we will pay for receipted motel and restaurant expenses up to \$600 per claim.*

*Some restrictions apply - see contract/policy for complete details.

Emergency Road Service

Available toll free on 24 hour line 1-877-342-2492 or by reimbursement.



COWING

Up to \$500 towing assitance if your your unit experiences a breakdown causing it to be immobile while traveling.



BATTERY SERVICE

Attempting to start the unit.**



DELIVERY SERVICE

Delivering emergency supplies of gasoline, oil, or coolant (you are responsible for paying for such emergency supplies upon delivery).**



EXTRICATION SERVICE

Attempting to extricate the unit if it is stuck and can be reached safely.**



LOCKSMITH SERVICE

Unlocking the unit if the keys are locked inside or replacing the keys if broken.**

**Up to \$200 per claim.



Mechanical Breakdown Contracts Administrator / Obligor

First Canadian Repair Protection 320 Sioux Road Sherwood Park, AB T8A 3X6



Mechanical Breakdown Policies Administrator / Underwriter

Millennium Insurance Corporation 320 Sioux Road Sherwood Park, AB T8A 3X6

Toll-Free PH: 1.800.381.2580 Local PH: 1.780.467.9575 Toll-Free FX: 1.800.304.4031 Local FX: 1.780.467.9812

*NOTICE: The contents provided in this brochure are only a summary of certain terms and conditions of the contract/policy. Please refer to the actual contract/policy for complete details of coverage and exclusions. Not all contracts/policies are available in all provinces, and specific provisions may vary based upon individual provincial requirements.